

UHF Digital Wireless Microphone



K734D

Operating Manual



Please read this manual carefully before use.

CONTENTS

Brief Introduction.....	1
Main Features.....	1
Parts(Receiver).....	2
Receiver Display.....	3
Handheld Mic Operation.....	6
Receiver Operation.....	8
Technique Specification.....	10

1.BRIEF INTRODUCTION

This digital wireless system adopts intelligitized cryptographic hardware. Unique sound and RF performance


With optional professional recharge accessories.
Endurable rechargeable lithium batteries.

Frequencies grouping, colorful TFT LCD and humanized menu make it easy for single or multi-sets mounting.

2.MAIN FEATURES


- Optional UHF band(500- 890Mhz)
- Digital audio transmission technology
- Unique digital 16 bit ID pilot technology, no crosstalk disturbance even same frequency.
- Ultra-short audio latency
- 48KHz audio
- Frequency response:30-20KHz
- Colorful TFT display and menu settings
- Auto frequency scanning and spectrum display


3.PARTS (RECEIVER)

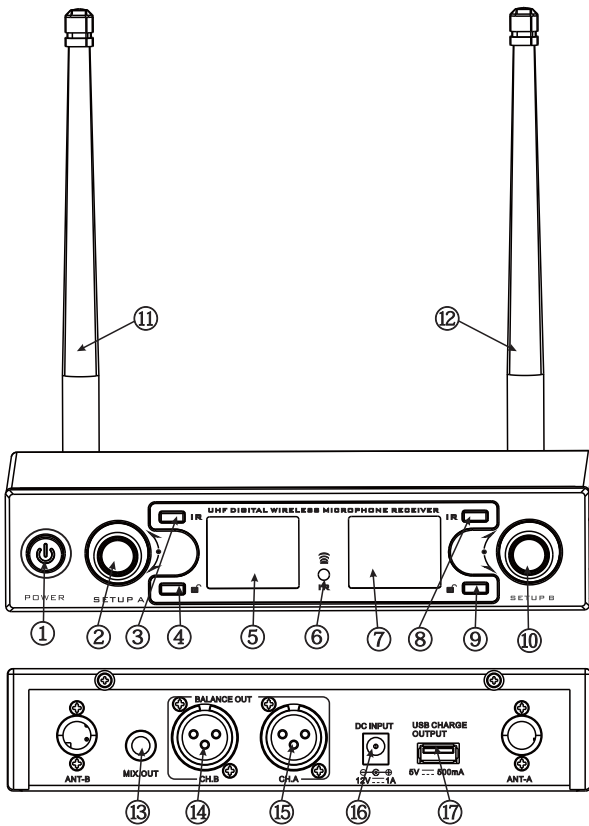

- | | |
|---------------|----------------------|
| 1. POWER | 10. SETUP B |
| 2. SETUP A | 11.ANT-A |
| 3. IR | 12.ANT-B |
| 4. UNLOCK | 13.MIX.OUT |
| 5. TFT WINDOW | 14.BALANCE A |
| 6. IR | 15.BALANCE B |
| 7. TFT WINDOW | 16.DC INPUT |
| 8. IR | 17.USB CHARGE OUTPUT |
| 9. UNLOCK | |

4. RECEIVER DISPLAY

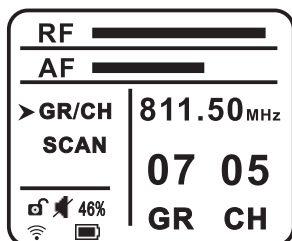

RF  **RF:** Indicate signal intensity, the longer length of the color, the stronger signal.
AF  **AF:** Indicate audio level, the longer length of the color, the stronger signal.

GR/CH **GR:** Group: Digital above the icon indicate the current frequency group.
CH: Channel: Digital above the icon indicate the current group frequency.

SCAN **UP** **DOWN** **Auto scan.** Automatically scan up or down to search for available frequency until the desired frequency is reached. Can be set under SCAN function.

 **Lock status,** the buttons are inefected under this status.

 **Mute,** indicates Receiver is under MUTE status.

46% **Indicate the current voice volume of Receiver,** adjustable range is 0%-100%

 **IR icon,** when flashing indicates now is sending SYNC signal.

 **Battery icon,** indicates the handheld microphone battery status.


Display function operation

- When the receiver working, long press UNLOCK to un-locked the system before setting. Initial setup from channel adjustment, below is the operation of the product.


Note: the below setting is under unlock status, long press UNLOCK before setting.

- Channel setting model

select menu icons

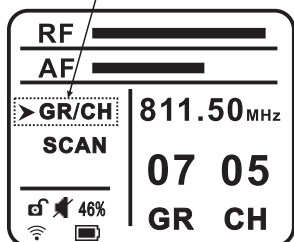

numbers change

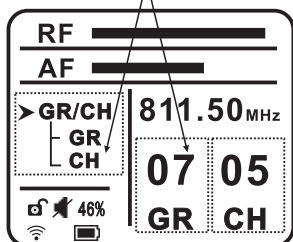

(1)

Adjust SETUP control knob, and press it enter into the channel setting mode while GR/CH is flashing.

Then adjust the control knob to select the appropriate menu items, select the appropriate channel by increasing or decreasing.



Pressing the control knob to confirm after select the appropriate channel, finally press IR function to syncing.

(As shown in Figure 1)

- Scan available channel mode

select menu icons


Spectrum Analysis of Enviromental

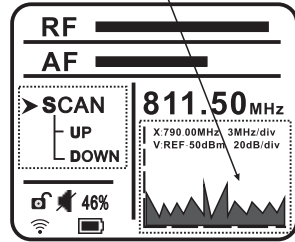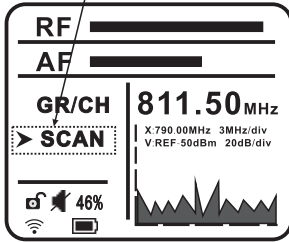

(2)

Adjust SETUP control knob, press SCAN function enter into scan available frequency mode. Then adjust the control knob, select UP or DOWN can automatically scan up or down to search for available frequency until the desired frequency is reached (2). This function is convenient for user to find the available frequency quickly under different situation.

- Transmitter power setting

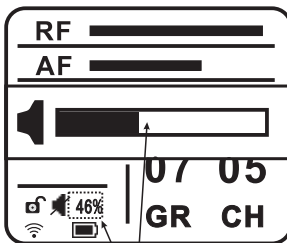


(3)

Voice Volume


Adjust SETUP control knob, can directly adjust the Receiver voice volume, obviously showed by Bar chart and numbers.

5. HANDHELD MICROPHONE OPERATION

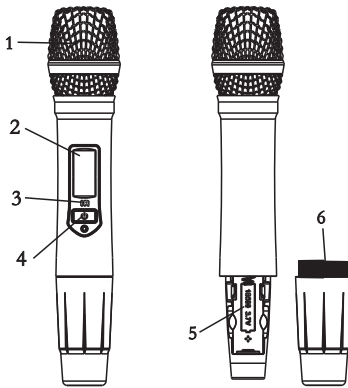

- 1、 Microphone capsule: use to pick up sound.
- 2、 LCD display: indicates the microphone working information status.
- 3、 SYNC window: use to receive IR signal, when SYNCING must put against to the Receiver IR window .
- 4、 ON/OFF switch: control the handheld microphone of power on, mute and off.
- 5、 Battery Sink: insert 1x18500 lithium battery, note to insert in correct polarity.
- 6、 Mic cap: unscrew it when change battery.

► HANDHELD MICROPHONE LCD FUNCTION

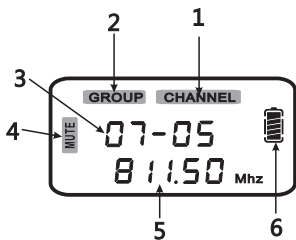

- 1、 **CHANNEL** Indicates working channel
- 2、 **GROUP** Indicates working group
- 3、 **07-05** Indicates Group 7, Ch05
- 4、 **MUTE** Indicates mute status
- 5、 **811.50 Mhz** Indicates current using frequency
- 6、 **[Battery Icon]** Indicates battery status, when flashing indicates battery is low of power




Under working status, long press ON/OFF button until see OFF, then the microphone is off.

- Remove the battery cover, insert 1x18500 Lithium battery in correct polarity.
- Long press ON/OFF button in 3 sec, if LCD not light, check whether battery in correct polarity or battery is low of power. If the battery indicator of LCD display is flashing, please change with new battery.
- The microphone can only work under the same frequency with Receiver.
- Automatically enter the default mode when switch on, and automatically save the last used channels, no need to reset if no any changing done.


Note! The SYNCING period is within 30 seconds.

HANDHELD MICROPHONE USING TECHNIQUE


(1) Don't hold the microphone Grille:

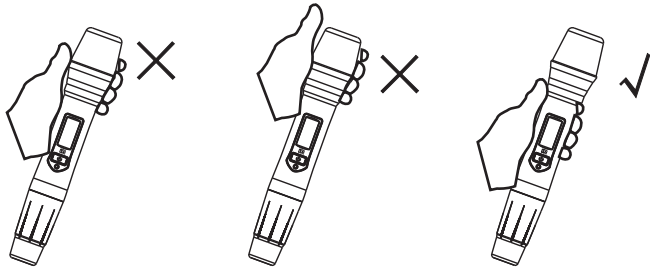

(2) Avoid holding the microphone on antenna position:

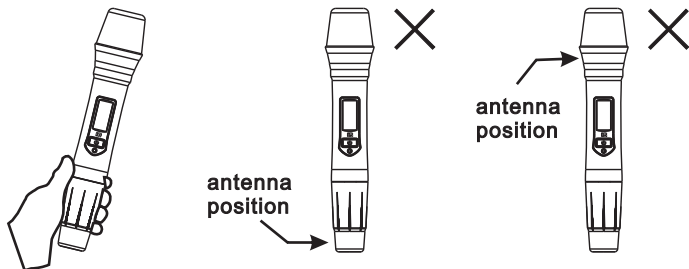

(3) Don't put the two microphone to use together:

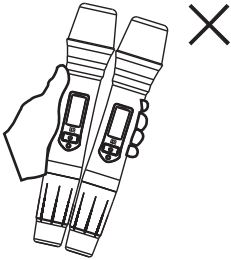

(4) Attention the using distance between the microphone Grille and mouth is less than 15cm.

(5) Avoid pointing the Grille against the Horn.

6. RECEIVER OPERATION

- Pull out the antenna (11), (12), make them to be perpendicular with the receiver.

- Connect the power:

Connect the power cable to the DC socket (16) of the Receiver, make sure the adaptor is suitable before using the Receiver.

- Connect the audio cable:

Mix output: connect the audio cable (attached) to the MIX. OUT socket (13) while the other side connect to MIX. IN or AUX. IN socket of the mixer or amplifier.

Balance output: connect the balance audio cable (purchased additionally) to the BALANCE socket (14/15) while the other side connect to MIX. IN or AUX. IN socket of the mixer or amplifier.


- Connect the USB charge cable:

Connect the charge cable (attached) to the USB socket (17) while the other side connect to the handheld microphone.

- Turn on the power button (1), LCD display (5、7) is lighting, Receiver is in working status. Note: Before turn on the Receiver, turn the volume control knob (2、10) to the minimum volume, adjust the volume as needed when the Receiver is working.

- Select function by adjusting the SET UP knob (2、10)
(Function details refer to the Instruction of Receiver TFT LCD display function)
- See below IR SYNC picture, long press IR button under unlock status, Receiver start sending signal, automatically turn to work after completion.

IR SYNC picture

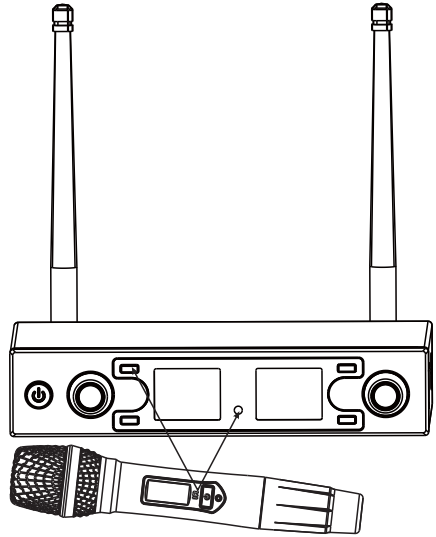


Long press IR button, start sending signal while signal icon flashing, turn on handheld microphone, put the IR window against the Receiver IR window. Signal icon disappear when IR connected, frequency shows the same between handheld microphone and Receiver.

► Warnings of Receiver installation

Beyond 1 meter more away from the wall

Beyond 1 meter more away from the floor

Antenna fully pull out, or will effect receiving signal

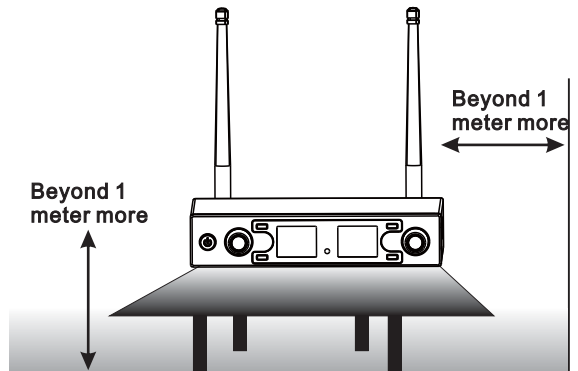

7. TECHNIQUE SPECIFICATION

RECEIVER

Carrier Frequency: UHF500- 890MHz

Bandwidth: 30MHz

Channel Bandwidth: 300KHz

Preset Group: 15 group, 6 frequencies in each group.

Dynamic Range: 96dB

Distortion: <0.1%

Frequency Response: 30-20KHz/+ -2dB

Signal/Noise Ratio: 96dB

Receiving Sensitivity: -95dBm

Transmission Delay: <3ms

Power Supply: DC12V 1A

Audio Output: 1 x 6.3mm, 1 x XLR balance output

MICROPHONE

Carrier Frequency: UHF500-890MHz

Bandwidth: 30MHz

Frequency Switch: IR SYNC


Output Power: 10mW

Harmonic Radiation: <-50 dBc

Battery: 1x18500 Lithium

Battery life: >8h

8. BODYPACK OPERATION

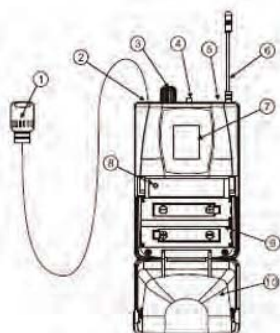

- 1.MICROPHONE
- 2.INPUT SOCKET
- 3.- VOL +
- 4.ON/MUTE/OFF
- 5.POWER
- 6.ANTENNA
- 7.LCD DISPLAY
- 8.IR SETTING SWITCH
- 9.BATTERY SINK:2X1.5 AA BATTERY ATTENTION WITH THE RIGHT POLARITY
- 10.BATTERY COVER

► BODYPACK LCD FUNCTION

-
1. CH Indicates working channel
 2. GR Indicates working group
 3. 07 05 Indicates Group 7, Ch5
 4. 811.50 Indicates current using frequency
 5. Indicates battery status, when flashing indicates battery is low of power
 6. Indicates mute status

- Remove the battery cover, insert 2x1.5AA batteries in correct polarity.
- Pull the switch to "ON" side, if LCD not light, check whether battery in correct polarity or is low of power. If the battery indicator of LCD is flashing, please change with new batteries.
- The bodypack can only work under the same frequency with receiver.
- Automatically enter the default mode when switch on, and automatically save the last used channels, no need to reset if no any change.

Note! The SYNCING period is within 30 seconds.

Content List

- 1、 Receiver.....x1
- 2、 Handheld Mic(Bodaypack)
.....x2
- 3、 Audio Cable.....x1
- 4、 Charge Cable.....x1
- 5、 Power Adapter.....x1
- 6、 18500Lithium Battery....x2
- 7、 Manual..... x1