
SAX332

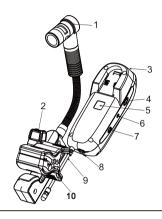



1. Capsule

2. Nail

3. Audio input

4. attenuation switch

5. IR window

6. Indicator light

7. Power switch

8. Rechargeable port

9. Antenna

10. Saxophone Clamp

SAXOPHONE/BODYPACK TRANSMITTER

• Carrier Frequency: UHF 660-690 MHz, optional


● Bandwidth: 12.5MHz

• Frequency Switch: IR SYNC

Output Power: 10mW

Harmonic Radiation: <-50 dBcBattery: Built-in lithium battery

• Battery Life: >3h

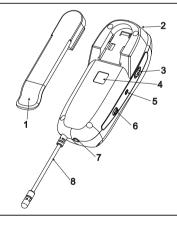

1. Bodypack Clamp

2. Audio input

3. attenuation switch

4. IR window

5. Indicator light

6. Power switch

7. Rechargeable port


8. Antenna

► AUDIO INPUT

Support to connect extral wired micphone or sound source equipment. For example, lapel mic, headset mic, MP3, mobile phone and so on.

RECEIVER OPERATION


- Pull out antennas(11) (12) and keep their angle 90° with receiver.
- Power supply connection:
 Connect power supply with DC input(16), make sure local power supply matches the item needed.
- Audio output connection:
 MIX output: connect one end of the attached audio cable into
 OUT. MIXport (13), meanwhile connect the other end into MIX IN or AUX IN port of mixer or speaker.
- Balance output: connect the audio cable(attached) to the MIX.
 OUTsocket (14/15) while other side connect to MIX. IN or AUX.
 In socket of the audio mixer or power amplifier.
- Connect the USB charge cable
 Connect the charge cable (attached) to USB socket (17)
 while other side connect to the saxophone/handheld microphone

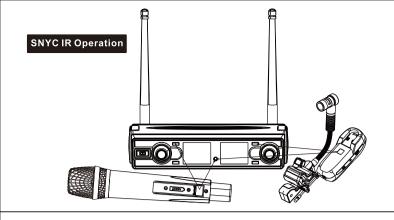


SNYC IR operation shows as above picture. Boot up receiver, and then long press IR button for 3 seconds till the IR indicator flashing and transmit IR signal, meanwhile, boot up microphone and keep ts IR window close to receiver's. Same frequency will show on microphone and receiver at the same time when IR SNYC successfully, and RF signal will show on LDC on receiver.

◆ Turn on the power button (1), TFT screen (5/7) is lighting, receiver is in working statue. Note: Before turn on the receiver, turn the volume control knob (2/10) to the minimum volume, adjust the volume as needed when the receiver is working.

- Select function by adjusting the SET UP knob (2/10) (Function details refer to the instruction of receiver TFT LCD display function)
- See below IR SYNC picture, long press IR button under unlock status, receiver start sending signal, automatically turn to work after completion.
 - Warnings of Receiver installation
 - Beyond 1 meter more away from the wall
 - Beyond 1 meter more away from the floor
 - Antenna fully pull out, or will effect receiving signal

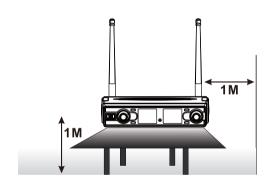

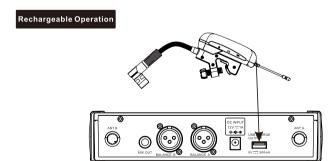

 See below RECHARGEABLE picture, use charge cable to connect (17) and saxophone tranmitter's rechargeable port to recharge. When fully charged it will be cut off automatialy

